
gorenje

BM341G3TDBGH/748120

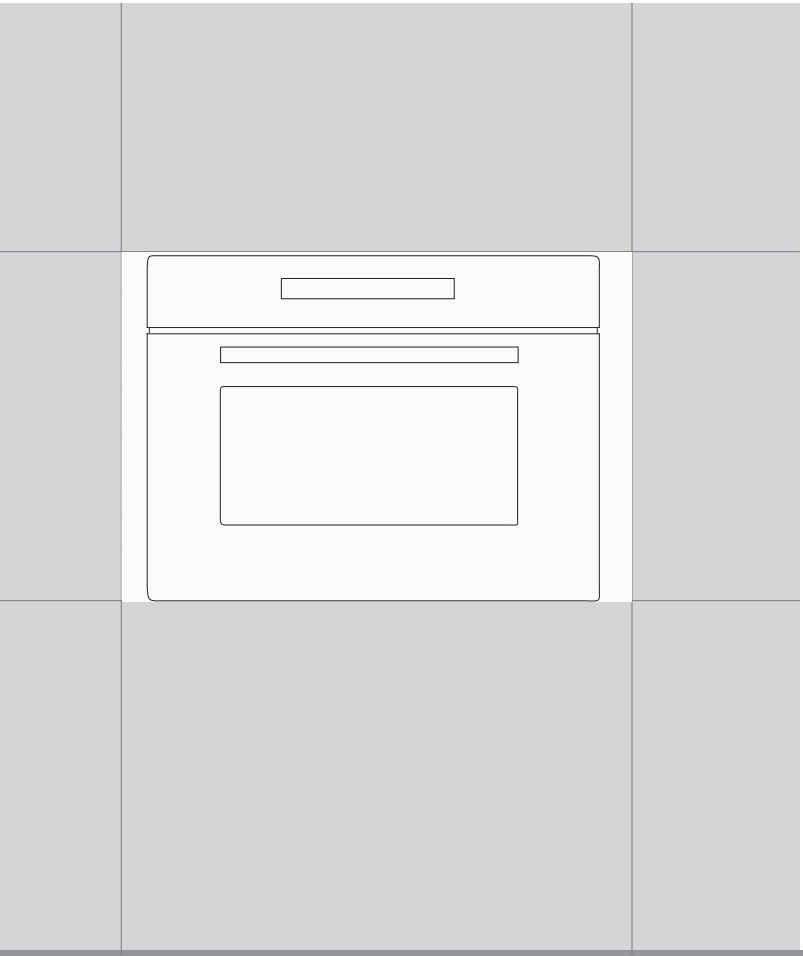

www.gorenje.com

DEAR CUSTOMER

We sincerely thank you for your purchase. We believe you will soon find ample evidence that you can really rely on our products.
To make the use of the appliance easier, we lattach these comprehensive instruction manual.

The instructions should aid you in getting familiar with your new appliance. Please, read them carefully before using the appliance for the first time.

In any case, please make sure the appliance was supplied to you undamaged. Should you identify and transport damage, contact your sales representative or the regional warehouse from where the product was delivered. You will find the telephone number on the receipt or delivery report.



We wish you a lot of pleasure with your new household appliance. The appliance for household use for heating food and beverages using electromagnetic energy, for indoor use only.

INSTRUCTIONS FOR USE

Carefully read the instructions and save them for future reference.

These instructions are intended for the user.
They describe the cooker and how to use it.
They also apply to different types of appliances, therefore you may find some descriptions of functions that may not apply to your appliance.

PREC AUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
(c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
  Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- The temperature of accessible surfaces may be high when the appliance is operating.

- Don't use under the worksurface and that it must not be subject to spillage from containers onto surfaces under which the appliance is installed.
- This appliance is a Group 2 Class B ISM equipment. Group 2 contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment.
- Class B equipment is suitable for use in domestic establishments and establishments directly connected to a low voltage power supply network.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- Only use utensils that are suitable for use in microwave ovens.
- Metallic containers for food and beverages are not allowed during microwave cooking.

- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar can lead to risk of injury, ignition or fire.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they can explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Only use the temperature probe recommended for this oven. (For ovens provided with a facility to use a temperature-sensing probe.)
- Care should be taken not to displace the turntable when removing containers from the appliance. (For fixed appliances and built-in appliances being used equal or higher than 900mm above the floor and having detachable turntables. But this is not applicable for appliances with horizontal bottom hinged door.)

- The appliance shall not be cleaned with a steam cleaner.
- **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- **WARNING:** Accessible parts can become hot during use. Young children should be kept away.
- Steam cleaner is not to be used.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which can result in shattering of the glass.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.) If, for cleaning, the user sets the control to a position higher than that for normal cooking purposes, the surfaces may get hotter than usual and children should be kept away.
- The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.)
- The microwave oven is intended to be used built-in.
- Surface of a storage drawer can get hot.
- **WARNING:** Ensure that the cavity does not contain any items or utensils that are not suitable for the use with the microwave oven before you operate the appliance.

- **WARNING:** Do not use the cavity for storing combustible products, cooking utensils, or food and similar when the microwave oven is not in use.
- The cavity lighting is a main function, which can facilitate users to clean and observe the food being cooked, etc. When users no longer need the lighting, for energy conservation, please close the oven door, the light will turn off automatically at this time. (For the oven with the cavity lighting.)
- Do not operate the microwave oven when empty: Avoid running the microwave without food inside to prevent overheating and potential damage to the cavity.
- Do not use the microwave oven continuously for an extended period, as it may activate the overheating protection mechanism and stop heating. Once the oven has cooled down, it can be used again.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE
HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:

1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
2) The extension cord must be a grounding-type 3-wire cord.
3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which can result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven.".

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven


Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. (For the model with turntable.)
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short–term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metaltrimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

NAMES OF OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.
Your oven comes with the following accessories:

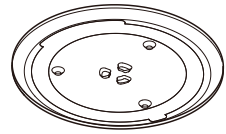


Glass Tray



Turntable Ring Assembly



Instruction Manual

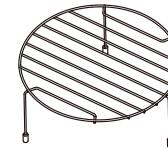


Wire Rack (must be placed on the glass tray.)



Turntable Shaft

Accessories Reference Chart


	 **Wire Rack**
Microwave	×
Grill	√
Combination: C-1	×
Combination: C-2	×
Speedy cooking	×
Defrost by weight	×
Defrost by time	×
Auto menu	×

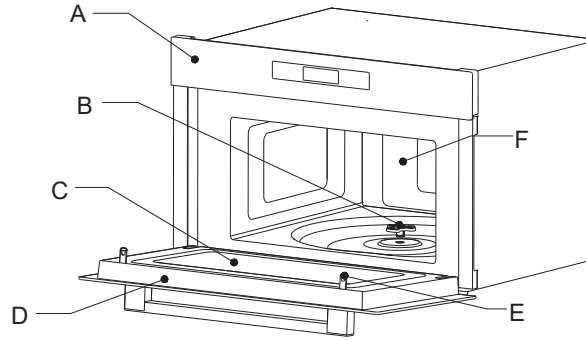

A) Control panel
B) Turntable shaft
C) Observation window
D) Door assembly
E) Safety interlock system
F) Oven cavity


TURNTABLE INSTALLATION

Cleaning the cooking compartment and putting the turntable in place.
For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

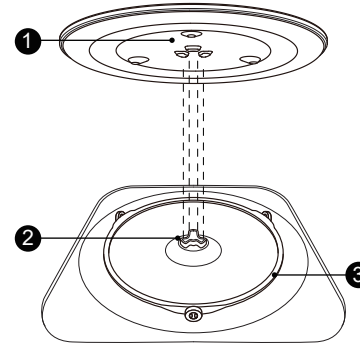

How to put the turntable in place:

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assembly ③. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the centre of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

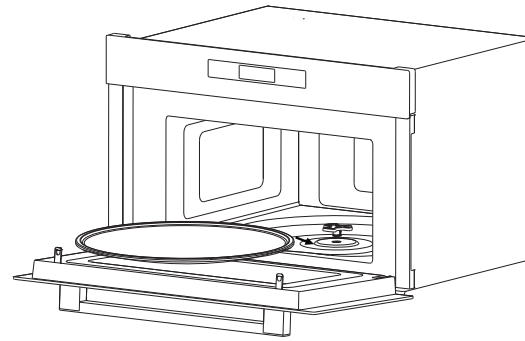

Notes:

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. Some food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Installation and connection


1. This appliance is only intended for domestic use.
2. This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cabinet.
3. Please observe the special installation instructions.
4. The appliance can be installed in a 60cm wide wallmounted cupboard.
5. The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
6. The mains voltage must correspond to the voltage specified on the rating plate.
7. The socket must be installed and connecting cable must only be replaced by a qualified electrician. If the plug is no longer to accessible following installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.
8. Adapters, multi-way strips and extension leads must not be used.
   Overloading can result in a risk of fire.
9. Don't use under the work surface and that it must not be subject to spillage from containers onto surfaces under which the appliance is installed.
10. Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
11. A disconnection incorporated in the fixed wiring is to be provided.

The accessible surface may be hot during and after operation.



BUILT-IN OVEN INSTALLATION


The dimensions attached are in mm.
The units into which the appliance is fitted must be heat-resistant up 95°C.
The minimum installation height is 850mm.

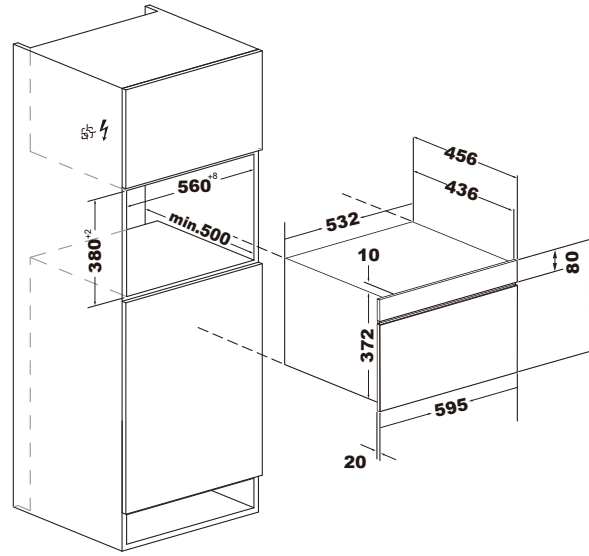

Building in

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.

1. Carefully push the microwave into the box, making sure that it is in the centre.
2. Open the door and fasten the microwave with the screws that were supplied.

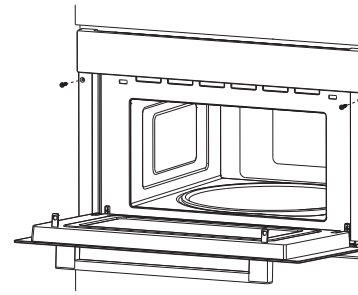

- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.

Important information with plug

Electrical connection
Important information with plug
The appliance is fitted with a plug and must only be connected to a properly installed earthed socket. Only a qualified electrician who takes the appropriate regulations into account may install the socket or replace the connecting cable. If the plug is no longer accessible following installation, an all-pole isolating switch must be present on the installation side with a contact gap of at least 3 mm. Contact protection must be ensured by the installation.
Fuse protection: see instructions for use-technical data.

CONTROL PANEL



BUTTON FUNCTION OVERVIEW

Button	Description
≈	Use microwave energy to cook
☰	Grill: The grill function allows you to brown or gratinate your food Combi.: Microwave energy and grill are used to work alternately Defrost: Quickly defrost frozen foods based on the weight or time
🕒	Set the clock / Set the kitchen timer
< >	Enter speedy cooking time setting by first touching “<” / Enter auto menu selection by first touching “>” / Adjust parameters (e.g., time, weight)
📄	Auto menu with preset programs by weight
⏸	Pause active cooking status / Cancel current operation / Lock function for children
▷| 30 Sec	Start speedy cooking for 30 seconds / Confirm input / Start operation / Add 30 seconds

OPERATION

1. Standby Mode

(1) When the microwave oven is plugged into an outlet, “0:00” will display, and the oven will enter the standby mode. If the clock is set, the screen will display the current clock in standby mode.

(2) During the setting, if  is pressed or if there is no operation within 5 minutes, the setting is invalid. And then the oven will enter the standby mode.

2. Setting the Clock

(1) Touch  once and then “00:00” will display.

(2) Touch  or  to set the hour figures.

(3) Touch  to confirm.

(4) Touch  or  to set the minute figures.

(5) Touch  to confirm.

NOTES:

(1) The clock is a 24-hour display. If the clock is not set, it will not work when powered.

(2) To reset the clock, please repeat step 1 to step 5.

3. Setting the Kitchen Timer

(1) Touch  twice and then “00:00” will display.

(2) Touch  or  to set the desired time.
The maximum time value is “95:00”.

(3) Touch  to confirm.
The timer starts counting down.

NOTE:

The kitchen timer is a timer.

4. Microwave Cooking


The 5 power levels are available.

Power Level	100%	80%	50%	30%	10%
Display	P10	P8	P5	P3	P1

(1) In standby mode, touch  once and then “P10” will display.

(2) Touch  repeatedly to set the power level.
The 5 power levels are available.

(3) Touch  or  to set the cooking time.
The maximum time value is “95:00”.

(4) Touch  to start cooking.

5. Grill Cooking

(1) Touch ☰ once and then “G-1” will display.
(2) Touch 〈 or 〉 to set the cooking time.
The maximum time value is “95:00”.
(3) Touch ▷| 30 Sec to start grilling.

NOTE:
The buzzer will sound to remind you to turn the food over during grilling.
If no operation, the oven will continue working.

6. Combination Cooking

(1) Touch ☰ once and then “G-1” will display.
Touch ☰ repeatedly to choose the combination cooking mode, then “C-1” and “C-2” will display in order.
(2) Touch 〈 or 〉 to set the cooking time.
The maximum time value is “95:00”.
(3) Touch ▷| 30 Sec to start cooking.

NOTE:
Combination instructions.

C-1	Micro 55%	Grill 45%
C-2	Micro 36%	Grill 64%

7. Defrost by Weight

(1) Touch ☰ twice and then the screen will display “0.1kg”.
(2) Touch 〈 or 〉 to set the weight of the food.
The range of weight is 0.1-2.0kg.
(3) Touch ▷| 30 Sec to start defrosting.

NOTE:
The buzzer will sound to remind you to turn the food over during defrosting.
If no operation, the oven will continue working.

8. Defrost by Time

(1) Touch ☰ three times and then the screen will display “1:00”.
(2) Touch 〈 or 〉 to set the defrosting time.
The maximum defrosting time is “95:00”.
(3) Touch ▷| 30 Sec to start defrosting.

NOTE:
The buzzer will sound to remind you to turn the food over during defrosting.
If no operation, the oven will continue working.

9. Speedy Cooking

(1) In standby mode, touch ▷| 30 Sec once to cook food at 100% power level for 30 seconds.
Each touch on the same key can increase 30 seconds and the maximum time value is “95:00”.

(2) In standby mode, touch 〈 once, and then touch 〈 or 〉 to set a cooking time with 100% power.

Touch ▷| 30 Sec to start cooking.

NOTE:

In microwave, grill, combination, and defrosting by time cooking state, each one more touch on ▷| 30 Sec can increase the cooking time by 30 seconds (except the defrosting by weight and auto menu).

10. Lock Function for Children

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.
To activate the lock:
In standby mode, touch and hold ⊓ for three seconds.
A beep sounds and the locked icon will display.
To deactivate the lock:
In the locked state, touch and hold ⊓ for three seconds.
A beep sounds.

11. Inquire function

If the clock has been set, the current time will display for three seconds by touching ◷ in the cooking state.

12. Auto Menu

(1) In standby mode, touch ☰ or 〉 once, the screen will display “A-01”.
(2) Touch ☰ repeatedly to choose the menu you need.
The 8 auto menus are available.
(3) Touch 〈 or 〉 to set the weight of the food.
(4) Touch ▷| 30 Sec to start cooking.

NOTE:

For menu “A-07”, please skip the step (3).

Auto menu Chart

Menu	Weight	Display	Power
A-01 POTATO	1 (about 230g)	1	P10
	2 (about 460g)	2	
	3 (about 690g)	3	
A-02 MEAT	150g	150	P8
	300g	300	
	450g	450	
	600g	600	
A-03 FISH	150g	150	P8
	250g	250	
	350g	350	
	450g	450	
	650g	650	
A-04 VEGETABLE	150g	150	P10
	350g	350	
	500g	500	
A-05 BEVERAGE	1 cup (about 240g)	1	P10
	2 cups (about 480g)	2	
	3 cups (about 720g)	3	
A-06 PASTA	50g (with 450g cold water)	50	P8
	100g (with 800g cold water)	100	
	150g (with 1200g cold water)	150	
A-07 POPCORN	100g	100	P10
A-08 PIZZA	200g	200	P10/G-1
	400g	400	

Specifications

Model:. BM341G3TDBGH/748120
Rated Voltage: ..... 220-240V~ 50Hz
Rated Input Power (Microwave): 1450W
Rated Output Power (Microwave): 900W
Grill: 1100W
Operating Frequency: 2450MHz
Outside Dimensions: ..... 595x382x456 mm
Oven Capacity: 34L
Weight: ..... Approx. 23.3kg
Noise level: ..... Lc < 63 dB (A)
Turntable diameter: 345mm

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode.

Standby mode	0.8 W
The maximum time needed for the microwave oven to automatically reach the applicable low power mode or condition.	20 minute

Troubleshooting

Before calling for service
Malfunctions can occur in all electrical appliances.
This does not necessarily mean there is a defect in the appliance. For this reason, please check the tables to see if you can correct the malfunction. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary repair costs. If you cannot solve it by yourself, please contact your nearest brand authorized service center.

⚠ WARNING-Risk of injury!

Improper repairs are dangerous
Malfunctions can occur in all electrical appliances.
This does not necessarily mean there is a defect in the appliance. For this reason, please check the tables to see if you can correct the malfunction. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary repair costs. If you cannot solve it by yourself, please contact your nearest brand authorized service center.

COMMON PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
The appliance is not working.	The mains plug of the power cord is not plugged in.	Unplug, then plug again tightly.
	There has been a power cut.	Check whether the lighting in your kitchen or other appliances are working.
	The door is not fully closed.	Check whether food remains or foreign material are trapped in the door, and make sure the door is properly closed.
No heating	The door is not closed No heating well.	Make sure the door is properly closed.
Noise	Microwave ovens make noise while working, but if the noise becomes unusually loud or unusual, it may be due to the turntable was not placed in the correct position. (For the model with turntable.)	Place the turntable in the correct position.

COMMON PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
Improper defrosting	The microwave power setting is set to lower. The food is colder than usual.	-
	Materials to be avoided were used.	Use microwave-safe cookware only.
	The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
	The food is not turned over or stirred.	Turn over or stir the food.
Unevenly cooked foods; Undercooked foods	The microwave power setting is set to lower.	-
	Materials to be avoided were used.	Use microwave-safe cookware only.
	The food is not defrosted completely.	Completely defrost food.
	The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
	The food is not turned or stirred.	Turn or stir the food from time to time during cooking.
Overcooked foods	The microwave power setting is set to higher. The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
The microwave is sparking, and arcing occurs.	Materials to be avoided were used.	Use microwave-safe cookware only.
	The oven is operated with no food in it.	It is forbidden to run the oven without any food inside. It is very dangerous.
	Spilled food remains in the cavity.	Clean the cavity with a wet towel.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

GUARANTEE & SERVICE

If you need information or if you have a problem, please contact the Gorenje Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, go to your local Gorenje dealer or contact the Service department of Gorenje domestic appliances.

Eventual mismatches in colour shades between different appliances or components within a single design line may occur due to various factors, such as different angles under which the appliances are observed, different coloured backgrounds, materials, and room illumination.

For personal use only!

Additional recommendations for cooking with microwave and useful advices can be found on web side:

http://www.gorenje.com

WISHES YOU A LOT OF PLEASURE WHILE USING YOUR APPLIANCE

gorenje

We reserve the right to any changes and errors in the instructions for use.

www.gorenje.com